



Nikon D5000 Back Panel Replacement

Prerequisite only.

Written By: Jacob Rardin





TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-


Step 1 — Back Panel



i The battery door has been removed for clarity, but is not necessary. See [this guide](#) for how to remove it.

- Unscrew the eight Phillips #00 screws on the back panel:
 - Two 2.5x6mm screws above the screen.
 - One 3x6mm screw on the upper part of **each** side (two total; right side shown).
 - One 3x7.5mm screw on the lower part of **each** side (two total).
 - Two 3x4.5mm screws on the bottom.

Step 2

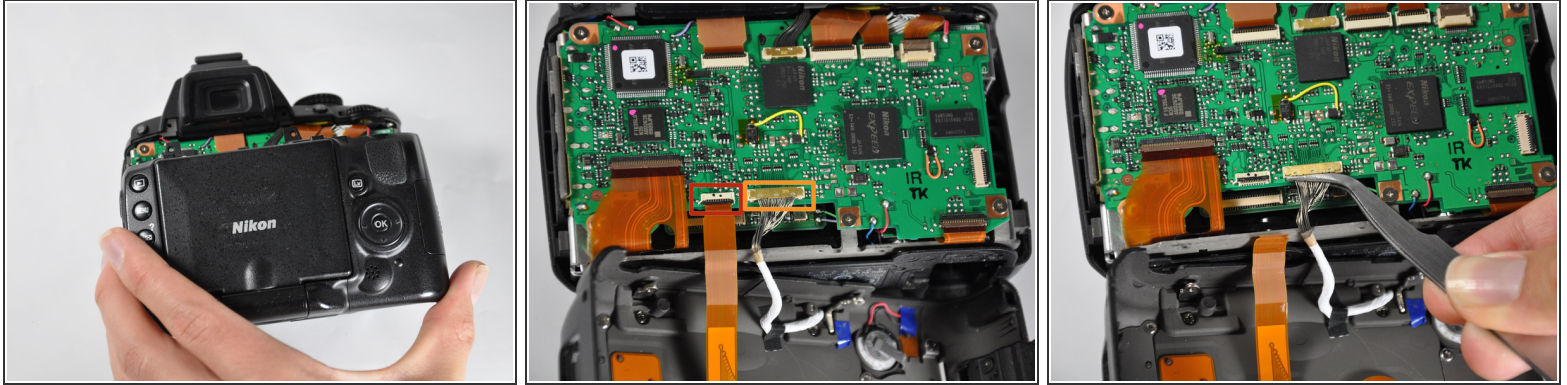

- Pull the back panel up, then tilt it back. There will be two cables still holding it on.
 - ⓘ Doing this will also release the connector cover on the left side. Set it aside for now, but remember to reinstall it later.
- Disconnect the ribbon cable by flipping the black tab up, then pulling the cable out.
 - ⓘ This procedure also applies to all of the other ribbon cables in the D5000.
- Pull out the other connector by lifting it up with tweezers, or by prying it out. Fingernails also work well.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-01 07:56:43 AM.